## FBs-NTC6

#### 6-channel NTC Temperature Input Module



#### Introduction

FBs-NTC6 is one of the temperature input modules of FATEK FBs series PLC. It provides 6 channels of Negative (or Positive) temperature coefficient resistance measurement capability with 14-Bit resolution. The scan rate can be 1 or 2 seconds by setting. All the optional features of this module are software configurable, there are no hardware jumpers or switches for user to setup. **Specifications** Total Channels - 6 CH **Resolution-** 14-Bit I/O Address Occupied -1 RI(Input Register) 8 DO(Discrete Output) Conversion Time-1 Sec.(Fast) or 2 Sec.(Normal) Accuracy- ±1 % Sensor Type- 2K, 5K, 10K,  $20K\Omega(@25^{\circ}C)$  NTC sensor Software Filter- Moving average Average Samples- 1,2,4,8 configurable **Recommended Resistance Range-** $100\Omega$ ~ $100K\Omega$ Sensor Open Circuit Detection- By application program to detect the reading value out of measurement range **Isolation**- Transformer(Power) and photo-coupler(Signal) **Indicator(s)** – 5V PWR LED Supply Power- 24V-15%/+20%, 2VA Internal Power Consumption- 5V, 35mA **Operating Temperature-**  $0 \sim 60$  °C **Storage Temperature-**  $-20 \sim 80$  °C Dimensions- 40(W)x90(H)x80(D) mm

#### **Dimensions**





## Wiring Diagram



# FBs-NTC6

### 6-channel NTC Temperature Input Module

#### I/O Configuration

Before the temperature value can be retrieved, the user should perform the I/O configuration of temperature module with the help of WinProladder software. The following screen will be shown when performing the "System Configuration", and double click "I/O configuration"

🚾 I/O Configuration	MC v4.x
Utilization	Timer/Counter Interrupt Setup Output Setup Input Setup Temp. Configuration
I/O No. Function   ×0 Undefined   ×1 Undefined   ×2 Undefined   ×3 Undefined   ×4 Undefined   ×5 Undefined   ×6 Undefined   ×7 Undefined   ×8 Undefined   ×9 Undefined   ×10 Undefined   ×11 Undefined   ×12 Undefined   ×13 Undefined   ×14 Undefined   ×15 Undefined	Temperature Configuration     Starting Address of Configuration Table:     Starting Address of Temperature Register:     R10   (R10~R15)     Starting Address of Working Register:   D0     Address   Module Name     Sensor Type   Unit of Temp.:     #1:   R3840     FBs-NTC6   Times of Average:     #2:   Scan Rate:     #3:     #4:     #5:     #6:
YU Undefined Y1 Undefined Y2 Undefined	#7: #8:
Y3 Undefined Y4 Undefined	
Y5 Undefined	
Y6 Undefined 🚩	
	🖌 Ok 🛛 🗶 Cancel

The user needs to assign a starting register of a contiguous register area for Configuration Table,

Temperature Register, and Working Register; also, the settings of Times of Average, and Scan Rate.

Please refer to the chapter 21 of User's Manual II for detailed explanation.

Owing to the reading values provided by the NTC6 module are a non-linear raw A/D conversion value, so when using this module there should put an additional MLC (Multiple-segment Linear Conversion) function instruction in the ladder diagram program, which will convert the raw reading value into the final temperature value.